


KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE


ASSEMBLY INSTRUCTIONS FOR THE WS & BG TABLES



 TABLE TOP

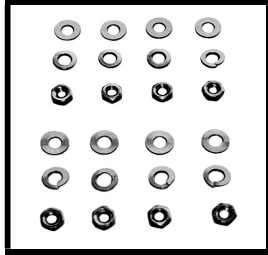

WASHERS

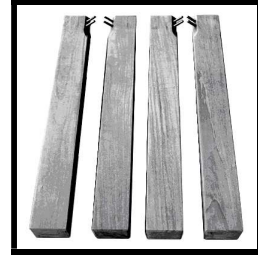 

LEGS

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.



STEP-II

Matching the numbers stamped on the LEGS to the corresponding numbers stamped on the corner blocks of the TABLE TOP, insert the LEGS into position as shown in the assembly photographs. Slide the washers and the locking washers over the threads and secure with the nuts.



STEP-III

Using a proper wrench, tighten the nuts slowly. Please take care not to over tighten as it may damage the item. Tighten until legs do not wobble. You should always upright the table with 2 people, tilting the table on its side and putting the weight on 2 legs to upright could cause damage to the table.

Lift table straight up, flip over and then set it down.



IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*

7200 Gateway Court, Manassas, Virginia 20109
Phone. 703-361-7000, Fax. 703-361-7001