 



KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE


ASSEMBLY INSTRUCTIONS FOR THE LO72/73

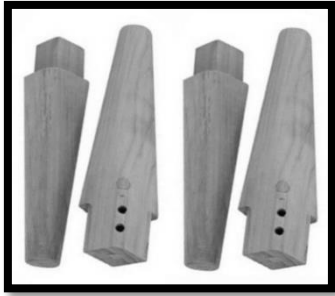

 
LEGS

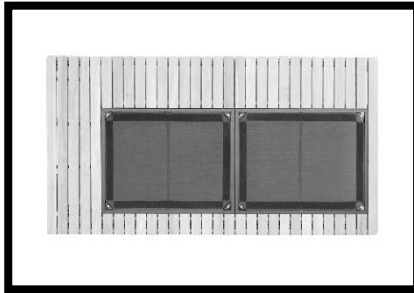


SEAT FRAME

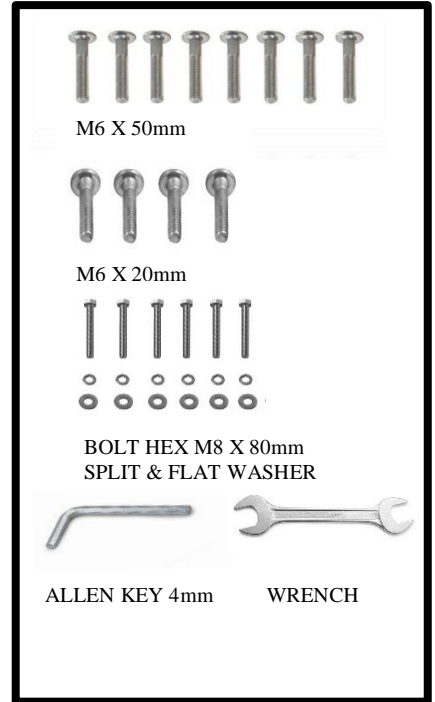 

HARDWARE

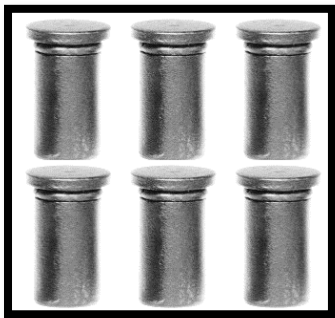 

PLUGS

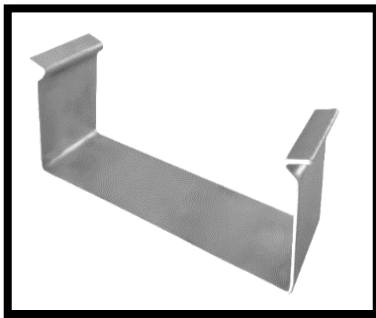 

CONNECTOR



CENTER LEG SUPPORT



SEAT CUSHION

UPHOLSTERED BACKREST

 
 
 
BACK CUSHION

CUSHION

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the Wood.



NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers stamped on wood.

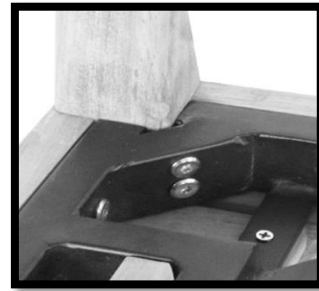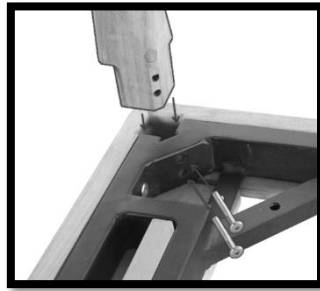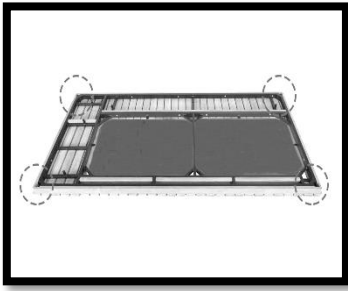

STEP-II

Carefully lay the SEAT DECK upside down on your clean surface, insert and attach the legs as shown in the assembly photographs using the M6 x 50mm bolts provided. You may need to wiggle the legs as you finish tightening the bolts to make sure they are fully secured.

  NOTE: DO NOT USE POWER TOOLS AS IT MAY DAMAGE THE ITEM.

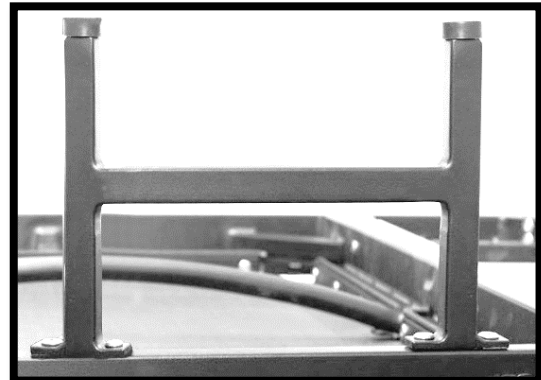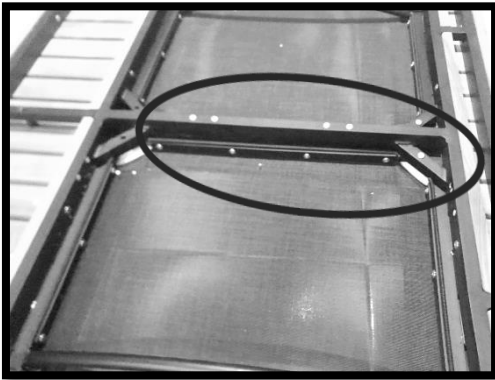


STEP-III

With the SEAT FRAME upside down, set the center leg support on the frame as shown in the photographs, ensuring that the holes in the SEAT FRAME and the leg supports are aligned.

Insert one each of the four M6 x 20mm Bolts into each hole. Bolts should be initially threaded by hand to prevent cross-threading.

NOTE: Do not tighten the bolts until all have been partially threaded. Once all bolts are in place, use the provided Allen Key to tighten them securely. Be careful not to overtighten, as this can cause the threads to strip. NEVER USE A POWER TOOL TO TIGHTEN THE BOLTS.

 The center leg supports include levelers for applications where the SEAT FRAME is used on an uneven surface. The height of the levelers can be adjusted by turning them. The levelers are properly adjusted when they are touching the ground.

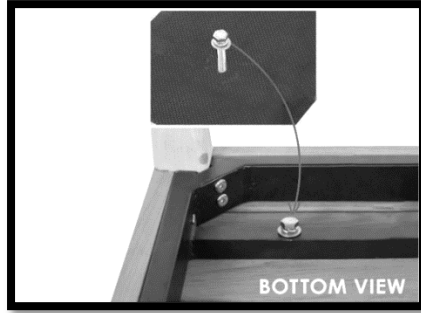


STEP-IV

Requires two people. With the assistance of a second person, lift the SEAT FRAME up, rotate it in the air and set it gently back on the ground.




Locate the six holes on the underside of the UPHOLDSTERED BACKREST and take note of the position of the corresponding holes on the SEAT FRAME. Set the UPHOLDSTERED BACKREST on the SEAT FRAME as shown in the photographs, ensuring that the holes in the UPHOLDSTERED BACKREST and SEAT FRAME are aligned.

Locate the six holes on the underside of the SEAT FRAME that correspond with the holes in the UPHOLDSTERED BACKREST and insert one each of the M8 x 80mm Hex Bolts, Split Washers, and Flat Washers into each hole (see picture showing correct arrangement of washers). Bolts should be initially threaded by hand to prevent cross-threading.

 
NOTE: DO NOT TIGHTEN THE BOLTS UNTIL ALL HAVE BEEN PARTIALLY THREADED. ONCE ALL BOLTS ARE IN PLACE, USE THE WRENCH PROVIDED TO TIGHTEN THEM SECURELY. BE CAREFUL NOT TO OVERTIGHTEN, AS THIS CAN CAUSE THE THREADS TO STRIP. NEVER USE A POWER TOOL TO TIGHTEN THE BOLTS.

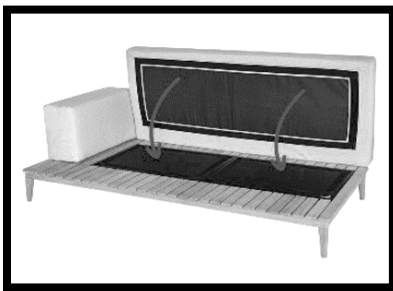

STEP-V

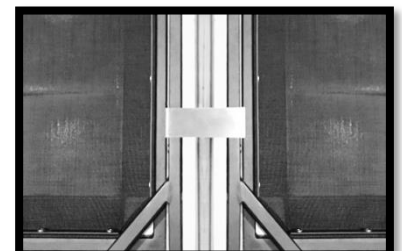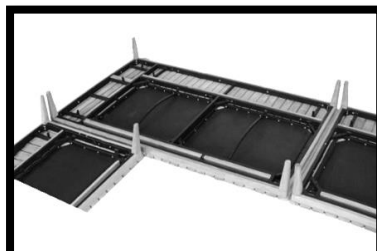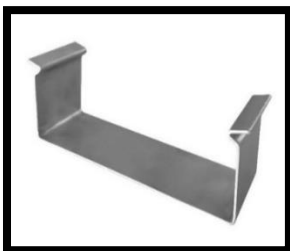   

 If you are connecting multiple sectional items together the photographs below illustrate where to attach them. DO NOT ATTACH THEM WHILE ITEM IS UPSIDE DOWN AS YOU WILL NOT BE ABLE TO UPRIGHT THE ASSEMBLY.

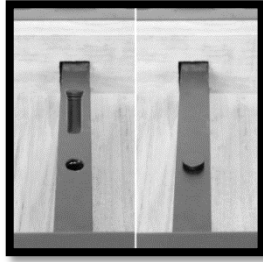

Plugs are provided to fill any unused holes in the metal frame that may be visible between the slats of the table section.

Locate any unused holes in the metal frame that are visible from above. From the underside of the frame, insert a plug **upward** into the hole as shown in the photographs.

The plugs are designed to fit snugly, and it may be necessary to use a rubber mallet, to press them into place.

NOTE: DO NOT USE A HAMMER TO DRIVE THE PLUGS INTO PLACE, AS DOING SO MAY CAUSE DAMAGE TO THE FRAME OR THE PLUG.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**** KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY***