

KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE

ASSEMBLY INSTRUCTIONS FOR THE TI-20/38/47



LEG ASSEMBLY




TOP




LEG ASSEMBLY



SCREWS

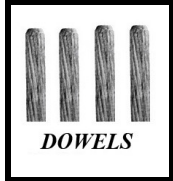

DOWELS

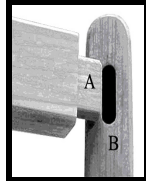

NOTE:

A TENON


B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft

surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

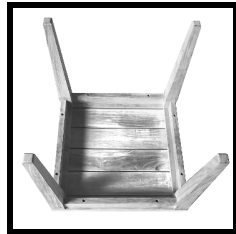

STEP-II

Fit the LEG ASSEMBLY mortise holes to the TOP FRAME tenons. If necessary, gently rock the LEG ASSEMBLY while pushing tenons into mortise holes until joints fit snugly. Make sure to match the numbered tenons with the corresponding mortise holes.



STEP-III

Carefully hammer the dowels into the pre-drilled holes of the assembly, details are shown in the photographs. **NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.**



STEP-IV

Secure the aprons of the LEG ASSEMBLIES to the underside of the TOP with the screws provided (see photo). Please use a proper screw driver, use of a power screw driver or drill with screw driver bit could damage the furniture.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*

7200 Gateway Court, Manassas, Virginia 20109
Phone: 703-361-7000, Fax: 703-361-7001