

If you have questions or concerns regarding

assembly instructions or missing parts, please

contact us at (833) 665-6300 or email

support@polywoodoutdoor.com

Share your space

We love to see where our furniture

ends up — snap a pic and share it on

Instagram or Facebook!

#polywood

Having Trouble?

POLYWOOD

Assembly Instructions



To view our full warranty, please visit polywoodoutdoor.com/warranty

Easily register your product using one of the methods below:


Text POLYWOOD to 71403

Receive a link to register online

- or -

Register on our website

register.polywoodoutdoor.com

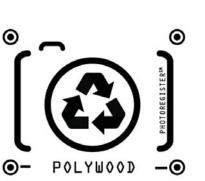

20-Year Warranty

- or -

Send a Picture

Take a photo of the icon below and text it to 71403 (US only)



Cleaning Tips

Even POLYWOOD gets dirty — here are some ways to help keep it clean:

For a quick clean:


Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

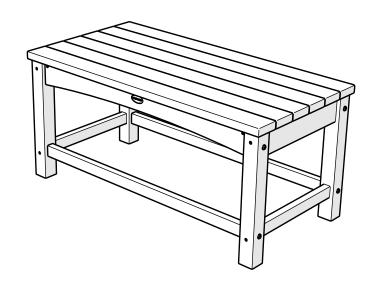




Watch & Learn

For assembly videos and more, visit youtube.com/polywood

 CLT1836 Club Coffee Table





4mm T-handle hex key (included)

PARTS

