Kingsley-Bate

NT70 Nantucket Chaise Lounge
Assembly Instructions

authenTEAK LLC
Outdoor Living

KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE NT - 70

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. Lay CHAISE FRAME on its back side with m ortise holes facing up as shown on the assembly diagram.

CHAISE FRAME

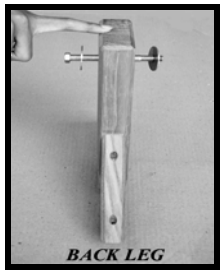

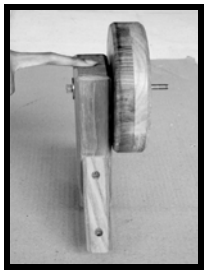

STEP-II

Before inserting the brass bolts through the back leg, slide one washer onto each bo lt. Insert the bolts through the back leg and slide on the second washers. Then slide wheel onto the bolt and conn ect the wheel assembly with the short axle.

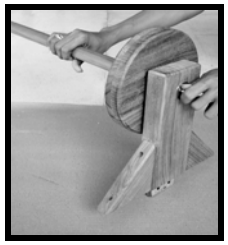

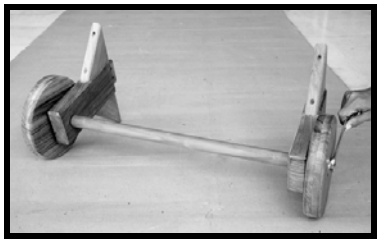

Screw in by hand and tighten with a standard adjustable wrench. Do not tighten too hard or the wheels will not turn. Com plete the WHEEL ASSEMBLY as shown on the assembly diagram

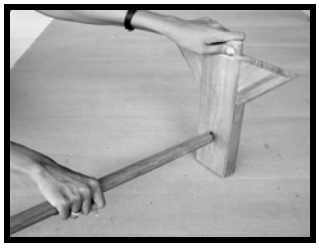

STEP-III

Before inserting the brass bolts to the front legs, slide one washer onto each bolt. Insert the bolts through the front legs and then c onnect with long axle. Screw in by hand also tighten with the standard adjustable wrench.

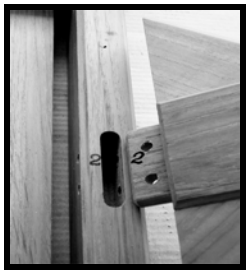

STEP-IV

With a rubber m allet gently knock the front and back leg assem blies into their corresponding place. **Be sure to match the numbered tenons with the corresponding mortise holes.**

STEP-V

If the wheels do not rotate after assembly, losen the bolts until you can achieve a smooth but secure movement.

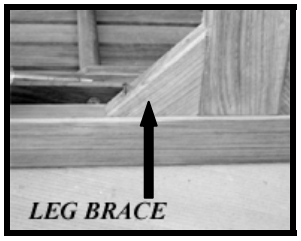

STEP-VI

Insert screws into all leg braces to secure the legs to the lounge frame. Do not hammer in the screws, but drive them in with a proper screw driver.

STEP-VII

With all legs tight against the side rails, insert the locking dowels and drive them in gently with a ham mer. You should place the sanding block between the ham mer and the dowel to prevent m arring of the wood. If any dowels protrude, please do not force them in. Any excess can easily be sanded away.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR K INGSLEY - BATE DIRECTLY. WE THANK FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*

7200 Gateway Court, Manassas, Virginia 20109
Phone : 703-361-7000, Fax : 703-361-7001