



KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE CB53/60

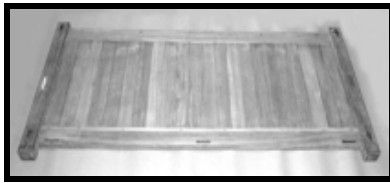

BACK/FRONT PANELS

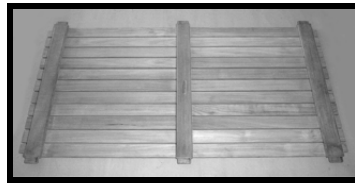

BOTTOM



LID



HANDLES




LID BOLTS



END

FRAMES

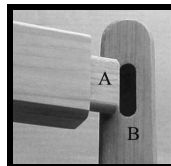

* NOTE:
A TENON
B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.




STEP-II

Carefully place either the FRONT or BACK PANEL on a smooth, flat surface with the mortise holes facing up. Matching the stamped numbers on the tenons with those next to the mortise holes, gently insert the END FRAMES and the BOTTOM into position as shown in the photograph.



STEP-III

Fit the remaining PANEL over and onto the exposed tenons and using a rubber mallet, drive all joints together evenly. If you use a hammer, put the sanding block between the hammer head and the wood to prevent any damage or marring of the wood.

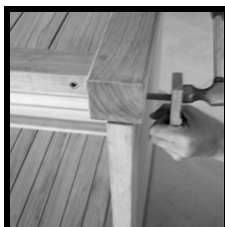

STEP-IV

Drive locking dowels into place with a hammer. Use the sanding block between the hammer head and the dowel to prevent marring of the wood. If dowel protrudes above the wood, sand it level with the sanding block provided. Make sure to sand along grain of the wood. **DO NOT FORCE DOWELS.**



STEP-V

From inside the box, insert the brass bolts fitted with one washer each. Slide the additional 4 washers over the exposed threads on the outside of the box and using a proper screw driver, secure the handle into place.

Use of any power screw driver could cause damage to the hardware or wood.



STEP-VI

Mount the lid with the 6mm brass knock down bolts, insert and slightly tighten all bolts by hand before tightening with flat tipped screw driver. **NOTE: THIS WILL BE EASIER TO DO WITH 2 PEOPLE. YOU DO NOT WANT TO LET THE WEIGHT OF THE LID**

FALL BACKWARDS DURING ASSEMBLY.



STEP-VIII

The hydraulic stays are already fitted to the lid; fasten the wooden blocks attached to the stay to inside of the box with the 6mm brass knock down bolts.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*