

Kingsley-Bate

AM30 Amalfi Lounge Chair Assembly Instructions



authenTEAK^{LLC}
Outdoor Living

KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE AM-30/55/80




BACK




BOTTOM LEG STRETCHER




SEAT

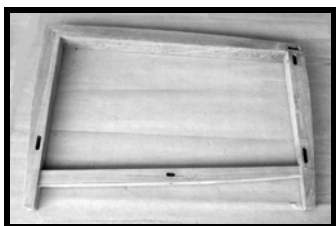

END FRAME

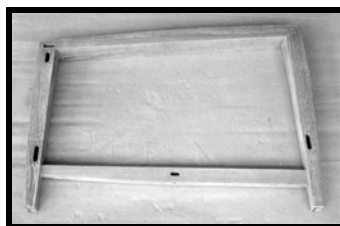

END FRAME

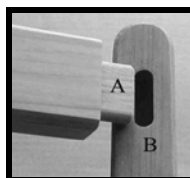

***NOTE**

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Assemble the SEAT to the BACK with the 6mm brass knock down bolts provided. Screw in by hand and tighten with a proper screw driver. Use of a power screw driver may damage the head of the brass knock down bolt.



STEP-III

Fit the SEAT/BACK assembly to one END FRAME as shown in the assembly photographs. Match the numbered tenons with the corresponding numbered mortise holes. Place the BOTTOM LEG STRETCHER into the END FRAME mortise hole. If necessary, gently rock the BOTTOM LEG STRETCHER until the joint fit snugly

together.



STEP-IV

Fit the second END FRAME into place. Using a rubber mallet or a hammer with the sanding block between the hammer and the wood, drive the tenons and mortise holes until all joints fit snugly together.



STEP-V

After hammering the END FRAMES tight against the rails, drive the 8mm locking dowels (larger dowels) with a hammer in the pre drilled positions before lowering the sofa or settee to its upright position.

*** IMPORTANT**

Lowering the sofa or settee before doweling the item may cause damage to the END FRAMES. TWO PEOPLE SHOULD UPRIGHT THE SETTEE AND SOFA. Use the sanding block between the hammer and the dowels for the last few blows to prevent marring the wood.



STEP-VI

Insert the 6mm locking dowels (smaller dowels) into the BOTTOM LEG STRETCHER and END FRAMES. Again, use the sanding block between the hammer and the dowels for the last few blows to prevent marring the wood. If the dowels protrude above the wood, sand level with the sanding block. Make sure to sand along the grain of the wood. ***DO NOT FORCE DOWELS***

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOUR OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*