


## KINGSLEY - BATE

# Fine Garden Furniture ASSEMBLY INSTRUCTIONS FOR THE TR - 30

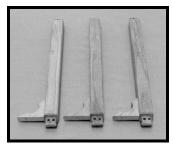






**LEGS** 

**TABLE TOP** 

**BASE** 



### STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

\*NOTE:
A TENON
B MORTISE HOLE



#### STEP-II

Place the TABLE TOP face down and carefully insert the LEG tenons into their respective mortise hole s on the underside of the TABLE TOP. Tenons of the LEGS will be stam ped with a number or letter to correspond with their respective mortise holes on the TABLE TOP.



#### STEP-III

Carefully take the BASE and insert the LEG tenons i nto their respective mortise holes. Again, please be sure to line up the stamped numbers or letters. Usi ng a rubber m allet or a regular hammer with a wood block between the hammer and the wood, drive the tenons and mortise holes together until all the joints fit snugly together.



#### **STEP-IV**

Place the table upright and dri ve the wooden dowels through the tenons of the LEGS using direct sharp blows from a hammer. To avoid marring the wood please use a block of wood between the dowel head and the hammer head fo r the last few blows. Do not force dowels; any excess can easily be sanded away.



#### STEP-VI

Insert all screws into pre-dr illed holes using a proper scre w driver as shown in the diagram. Use the small teak plugs to cover the screws.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

\*KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.