

Kingsley-Bate

TR36-42-50-60 Essex Round Dining Table Assembly Instructions



KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE TR - 36/42/50/60



LEGS



TABLE TOP


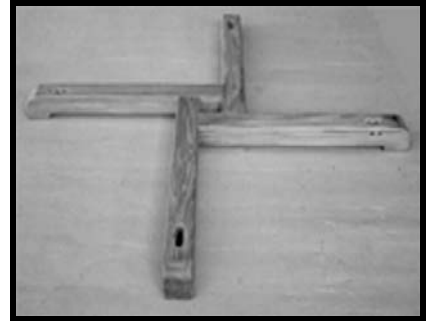


TABLE BASE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.
NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

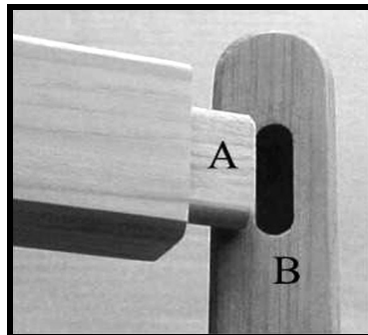

* NOTE

A TENON

B MORTISE HOLE

STEP-II

Place the TABLE TOP face down and carefully insert the LEG tenons into the respective mortise holes of the TABLE TOP. Tenons of the LEGS will be marked with a number or a letter to correspond with the respective mortise holes of the TABLE BASE. Insert all four LEG tenons into the respective mortise holes of the TABLE TOP.



STEP-III

Carefully take the TABLE BASE and insert the LEG tenons into the respective mortise holes of the TABLE BASE. Make sure that the numbered or lettered tenons match the mortise holes. Using a rubber mallet or a regular hammer with a wood block between the hammer and the wood, drive the tenons and mortise holes together until all joints fit snugly together.



NOTE: Do not force dowels. Any excess can be easily sanded away.

STEP-IV

Drive the wooden dowels through the tenons of the LEGS. Two dowels should be driven through each tenon for all tables. Drive the dowels using direct sharp blows with a hammer. Take care not to mar the wood. You may want to sand lightly to smooth out any rough edges.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*