

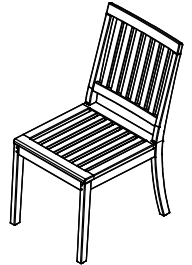
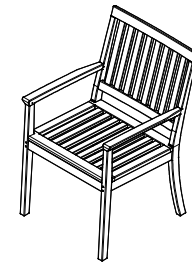
Tools required :
 - 5mm allen key
 - Sand paper
 - Wood block
 - Hammer or Mallet

CALERA TEAK DINING ARM / SIDE CHAIR

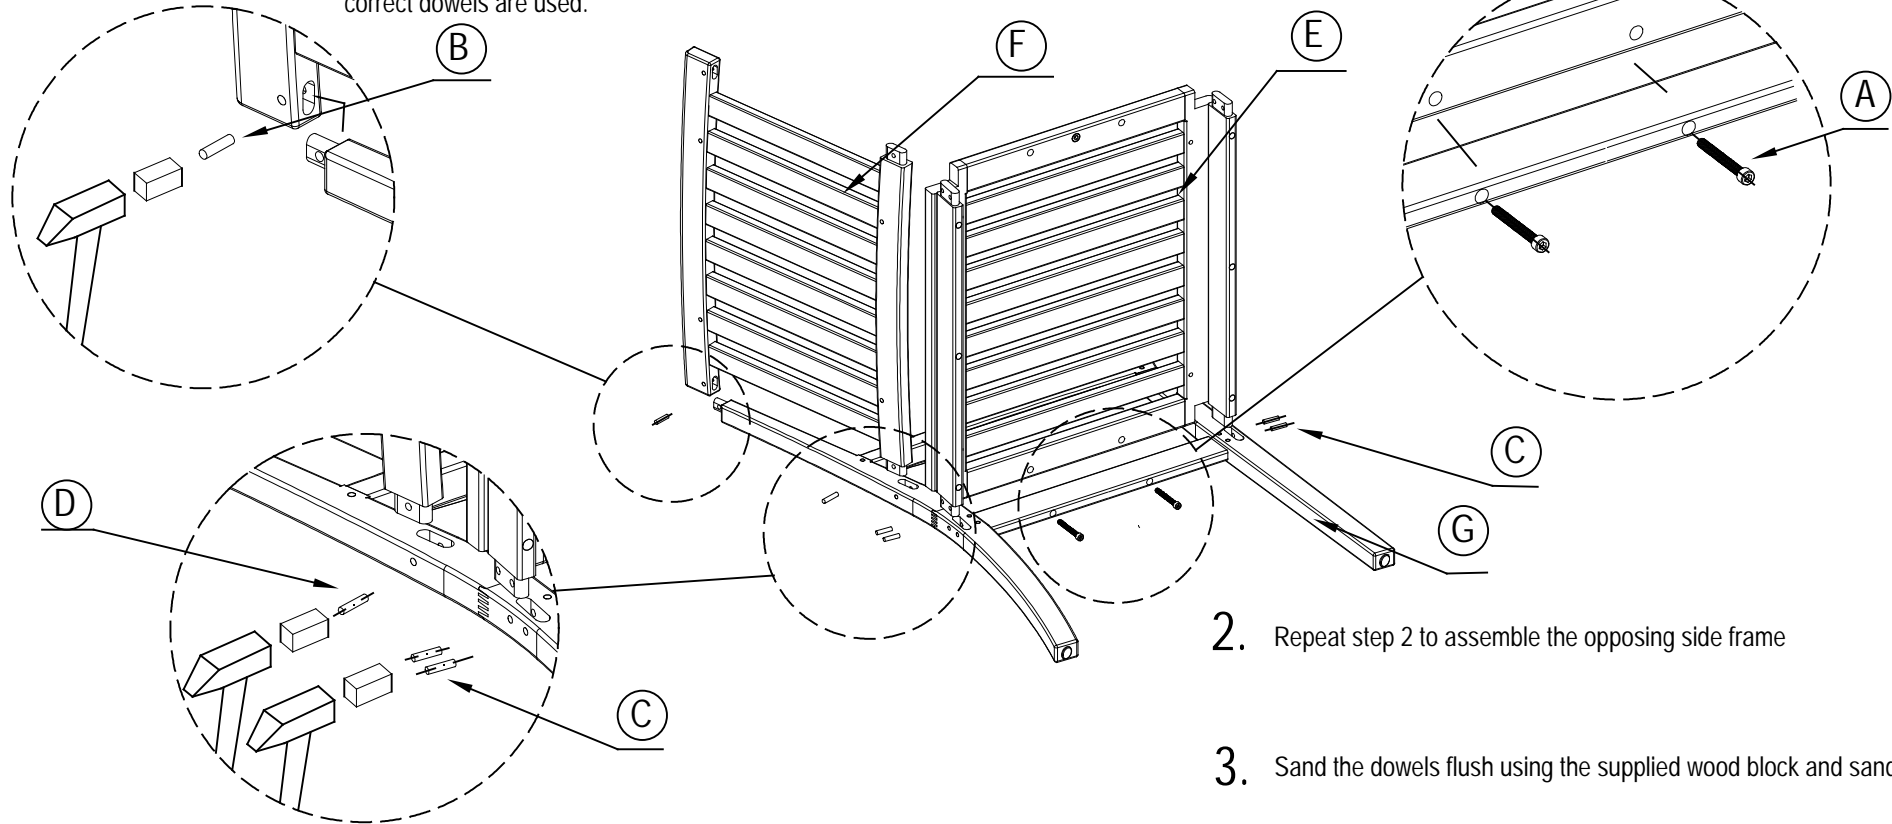
ASSEMBLY INSTRUCTION

Calera Teak Dining
Arm Chair

Calera Teak Dining
Side Chair

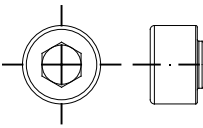

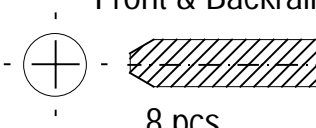
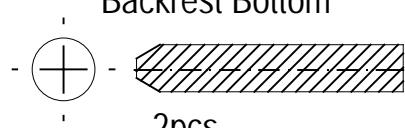


1. Line up seat assembly and back assembly with the side frame and secure it with the dowels and the M6x15 cm, There are 3 different length of dowel carefully check to ensure the correct dowels are used.



2. Repeat step 2 to assemble the opposing side frame

3. Sand the dowels flush using the supplied wood block and sandpaper

<p>(A) Socket Head Bolt M6x50 mm</p>  <p>4 pcs</p>	<p>(B) Dowel 20mm Backrest top</p>  <p>2 pcs</p>	<p>(C) Dowel 25 mm Front & Backrail</p>  <p>8 pcs</p>	<p>(D) Dowel 35 mm Backrest Bottom</p>  <p>2 pcs</p>	<p>(E) Seat Assembly</p> <p>(F) Backrest Top Assembly</p> <p>(G) Teak Side Frame</p>
---	--	--	--	---